




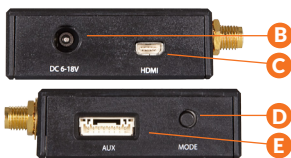

CLIP

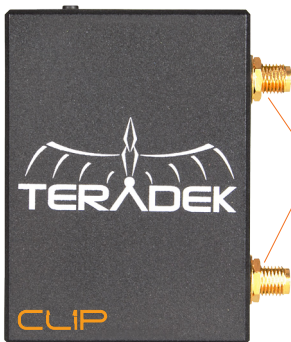

- A: Wireless Antenna
- B: Power Input
- C: Micro HDMI Video Input
- D: Mode Button
- E: Auxiliary Connector
- F: Stream Status Indicator
- G: Client Status Indicator
- H: Access Point Status Indicator
- I: Reset Button
- J: WiFi Status Indicator
- K: Encoder Status Indicator
- L: Video Status Indicator

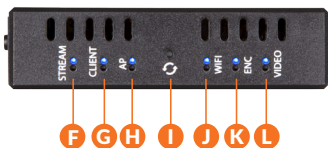

| LED Description | Off | Red/Yellow | Blue |
|-------------------|----------------|-----------------------|------------------------------|
| Stream | Not streaming | Client not responding | Streaming |
| Client | No clients | N/A | AP Mode |
| | | | • Solid: Client(s) Connected |
| | | | Infrastructure mode |
| | | | • Blinking: Connecting |
| | | | • Solid: Connected |
| AP (Access Point) | N/A | Infrastructure Mode | AP Mode |
| WiFi | Not configured | 2.4GHz | 5GHz |
| Encoder | Not encoding | Restarting/no host | Ready/Encoding |
| Video | No video | Video not supported | Video sync |

Button Operation

Mode Button

- Hold for 1–2 seconds: Switches stream destination (when multiple clients are connected).
- Hold for 6–8 seconds: Toggles between AP mode and Infrastructure mode (if configured).


Reset Button

- Hold for 5 seconds: factory reset.


GETTING STARTED

1

1 iOS users – download the TeraClip app.

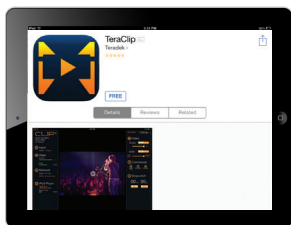

3 Connect iPad to Clip's network. (WiFi SSID – CLIP-xxxx)

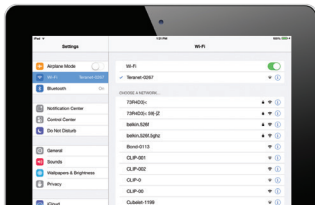

2 Plug power and video into Clip. Attach antennas.

4 Open the TeraClip app.



- | | |
|------------------------------------|----------------------------|
| A: Device Information | G: Controls |
| B: Video Input Status | H: Settings |
| C: Encoder Information | I: Encoder Settings |
| D: WiFi Network Information | J: Player Controls |
| E: Player Status | K: Stop Watch/Timer |
| F: Browse Devices | |

- A:** Displays Clip's device name, serial number and IP address.
- B:** Displays input video resolution.
- C:** Displays current video quality and delay.
- D:** Displays the SSID of connected WiFi network.
- E:** Displays video stream bitrate and the load on the player.
- F:** Browse for Clip devices.
- G:** Viewer Control Panel settings.
- H:** Launch Clip's full configuration menu.
- I:** Manually change the video quality and buffer for lower delay or smoother video.
- J:** Switch Feed: Requests Clip to send the video stream to your iPad.
Orientation: Flips the video 180°.
Snapshot: Saves a snapshot of the video in the device's album.
- K:** Touch "start" to count from zero, or touch "set" to set the countdown timer. Use this to keep track of flight times, shot length, battery life, etc.

NEED MORE HELP?

1. Support forum: <http://support.teradek.com> → Contains tips, information and all the latest firmware & software updates.
 2. Training videos: <http://www.teradek.com/training>
- TERADEK SUPPORT STAFF:** support@teradek.com or call 888-941-2111 ext2 (Mon-Fri 9am to 6pm PST)